

Specifications for the Technovision AC1 controller.

AC1 Connectors:

AC1 BACK




Line OUT RS232 port Keypad port POWER IN

AC1 FRONT




R LINE L IN R+ R- L+ L-
SPEAKER OUT

RS232 connector

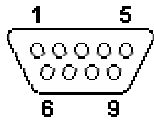

PIN #	RS232 signal
2	RS232 OUTPUT from AC1
3	RS232 INPUT to AC1
5	RS232 GROUND

 Keypad connector



PIN #	Description
1	GROUND
2	Return 0
3	Return 1
4	Return 2
5	Return 3
6	Scan 0
7	Scan 1
8	Scan 2
9	Scan 3

For more information contact:
 Technovision Interactive Inc.
 (905) 420-5153
www.technovision.com