

# Technovision HD01



## V4

### Quick Reference Guide

Revision 2017 / 04

[www.technovision.com](http://www.technovision.com)

#### Specifications:

**Power supply:** 5Vdc

**Power Consumption:** < 800mA

**Video System:** NTSC and HD.

**Dimensions:** 76x65x15mm

**Weight:** 50g

#### Full Manual at:

[www.technovision.com/manuals.html#hd01](http://www.technovision.com/manuals.html#hd01)

#### Operation

The HD01 high definition digital signage player is capable of playing back full-motion audio & video clips from standard SD/SDHC cards (**FAT32 or NTFS formatted**) or USB 2.0 media.

#### Video file formats (extensions) supported:

AVC, AVI, DIVX, MKV, MOV, HDMOV, MP4, FLV, VOB, MPG, DAT, MPEG, TS, TP, M2TS, and WMV.

#### CODECS supported:

H.264, H.263, WMN9/VC-1, and MPEG1/2/4

#### Audio formats supported:

MP3, DTS, WMA, OGG, and AAC.

#### Image formats supported:

BMP, JPG, PNG and GIF.

**\*\* NOTE \*\***

**DO NOT PLUG A STEREO CONNECTOR INTO THE A/V PORT ON THE HD-01. THIS CONNECTOR HAS AUDIO AND VIDEO SIGNALS**

#### Initial Setup

Once plugged in, with the AUTO PLAY set to "Movie", the player will automatically power on, and within 10 seconds, will begin to play from the point from where it last left off. If the HD01 does not automatically start playing, you may need to set the AUTO PLAY on the SETTING menu to "Movie".

While playing, you can press the **MENU** to go to the SETTING Menu or **HOME** button to go to the MAIN MENU or

#### MAIN MENU

The main menu has five icons:

Files lists all the files on the storage media

Music lists the audio files

Movie lists the video files

Photo lists the image files

Setting SETTING MENU.. see next page

Press **←** or **→** to highlight your choice and **ENTER** to select.

#### Other Buttons on the Remote

**hdmi** Selects hdmi\_720p output.  
**CVBS** Selects Composite video output.  
**MODE** First press shows current output, subsequent presses cycle through the other Video Output selections. After 5 seconds, that selection is chosen.  
**EXIT** Exit from the current page.  
**AUDIO** Change audio channels when playing.  
**HOME** MAIN MENU

#### SETTING MENU

When on this menu, press ENTER to make a selection from the left column, once you make a selection in the right column, you may press the EXIT to go back to the setting menu selection.

Language	Sets the default language.
Screensaver	Sets the screensaver time (1 min to 2 hours or OFF) default <b>15</b> min.
Video Output	Sets the player's output: PAL, NTSC or hdmi ( <b>720p</b> , 1080i or 1080p @ 50 or <b>60</b> Hz).
Audio Output	<b>Normal</b> (audio on hdmi) Analog (audio on A/V connector).
AutoPlay	Off / Movie / Music / Photo
AutoPlay Folder	not implemented yet
Auto Detect hdmi	Off / <b>On</b> Will automatically switch if cable and monitor is attached.
Restore Default	[YES] / [NO]
System Info	TVD 2.0 2014-11-15

#### FAQs

Q: I would like to run my video on the hdmi, but have the audio come out of the A/V connector.

A: On the SETUP MENU change Audio Output to "Analog".

Q: Can I plug a standard 3.5mm stereo audio cable into the AV OUT instead of the (3-RCA) AV cable that came with the player?

A: The AV OUT is NOT a stereo audio connector – you will short the video, potentially damaging the player.

	<u>CURRENT 15mm</u>	<u>ORIGINAL 17mm</u>
1 <sup>st</sup> ring (tip)	RIGHT	VIDEO
2 <sup>nd</sup> ring	LEFT	LEFT
3 <sup>rd</sup> ring	VIDEO	RIGHT
4 <sup>th</sup> ring (GRD)	GROUND	GROUND