

Technovision Inc.

TV-66K with
MSYNCH firmware
for the DV66/68

Quick Reference Guide

Version 1.1

Requires version 1.0J firmware in the DV68
or version 2.0 DV66

Revision 05/07

Technovision Inc.
1845 Sandstone Manor, #2
Pickering, Ontario
L1W 3X9
P:(905) 420-5153
F:(905) 420-0753
www.technovision.com

Operation

The TV-66K with **MSYNCH** firmware will send the TRACK 1 command (after the start-up delay) to all the DV66/68 players upon sensing the start button (terminal 9 grounded) during the playing of the menu file (000).

- Make sure the TV-66K is not installed against a conductive surface.
- Make sure the power to the all the players is OFF before attaching them to the TV-66K.
- Make sure the DV66 or Dv66 is set to MENU mode.

DIP switches (DEFAULT = ON)

DIP 1 **ON** = adds a 6 second start-up delay.
OFF = Test mode.

Attaching players

Attach the standard control cable (DV66KC) that comes with the TV66K to DV66/68 #1 and connector TS1 on the TV-66K controller. This is the player that provides the power to the TV66K.

You may purchase CC68 control cables to attach more players to the TV66K. On these cables, attach either the BLACK or YELLOW wire to terminal#10 (GROUND) and the RED or GREEN wire to any of the other terminals (1..8).

System Diagram

