

Technovision Inc.

TV-66K with
SYNCH firmware
for the DV66/68

Quick Reference Guide

Version 1.7

Requires version 1.0J firmware in the DV68
or version 2.0 DV66

Revision 05/07

Technovision Inc.
1845 Sandstone Manor, #2
Pickering, Ontario
L1W 3X9
P:(905) 420-5153
F:(905) 420-0753
www.technovision.com

Operation

The TV-66K with **SYNCH** firmware will send the TRACK command (after the start-up delay) to all the DV66/68 players and upon sensing the next track, resends the TRACK command.

- Make sure the TV-66K is not installed against a conductive surface.
- Make sure the power to the all the players is OFF before attaching them to the TV-66K.

DIP switches (DEFAULT = ON)

- DIP 1 **ON** = adds a 6 second start-up delay.
OFF = Test mode.
- DIP 2 **ON** =TRACK 1, OFF=TRACK 2 synch.
- DIP 3 **ON** = DV66/68 in REPEAT mode.
OFF = DV66/68 in MENU mode.

Attaching players

Attach the standard control cable (DV66KC) that comes with the TV66K to DV66/68 #1 and connector TS1 on the TV-66K controller. This is the player that provides the power to the TV66K.

You may purchase CC68 control cables to attach more players to the TV66K. On these cables, attach either the BLACK or YELLOW wire to terminal#10 (GROUND) and the RED or GREEN wire to any of the other terminals (1..8).

Firmware Version 1.7 addition: When terminal #9 is grounded in MENU synch mode - the system will **STOP** and revert to looping the menu video (000.mpg) until the terminal is grounded again.

System Diagram

