

SD Card Configuration:

The mode.txt file on the SD card should contain the line “DNC”
 There should be only one mp3 file on the SD card – called 001.mp3.

Wiring of TM21SYNCH box:

**** You can use a single power supply (P/S) for all the TM21s****

- 1) Wire the + voltage from the 12VDC power supply to the VDC on all the TM21s
- 2) Wire the GROUND (-) from the power supply to the GND (ground) on all the TM21s
- 3) Wire the RED wire from the TM21SYNCH to the TRG on all of the TM21s
- 4) Wire the GREEN wire from the TM21SYNCH to the VDC on TM21 #1
- 5) Wire the BLACK wire from the TM21SYNCH to the GND on TM21 #1
- 6) Wire the GREEN wire from the TM21SYNCH to the BSY on **ONLY** TM21 #1

TM21SYNCH BOX	TM21#1	P/S	TM21#2	TM21#?
GREEN -----	VDC -----	+ (STRIPE) ----	VDC -----	VDC
BLACK -----	GND -----	- (BLACK) ----	GND -----	GND
RED ---->>-----	TRG ----->>-----		TRG -->>--	TRG
BROWN -----<<-----	BSY			

For more information contact:
support@technovision.com
 (905) 420-5153