


**SDHC Card Configuration:**

- o The mode.txt file on the SDHC card should contain the line “DNC”
- o There should be only **one** mp3 file on the SDHC card – called 001.mp3.
- o The length of the audio file on TM21#1 must be greater than or equal to the files on the rest of the TM21s.

**Wiring of TM21SYNCH box:**

**\*\* You can use a single power supply (P/S) for all the TM21s\*\***

- 1) Wire the + voltage from the 12VDC power supply to the VDC on all the TM21s and the (+) terminal on the TM21 SYNCH box.
- 2) Wire the GROUND (-) from the power supply to the GND (ground) on all the TM21s and the (-) terminal on the TM21 SYNCH box.
- 3) Wire the GREEN (or WHITE) wire from the TM21SYNCH to the TRG on all of the TM21s
- 4) Wire the RED wire from the TM21SYNCH to the BSY on **ONLY** TM21 #1

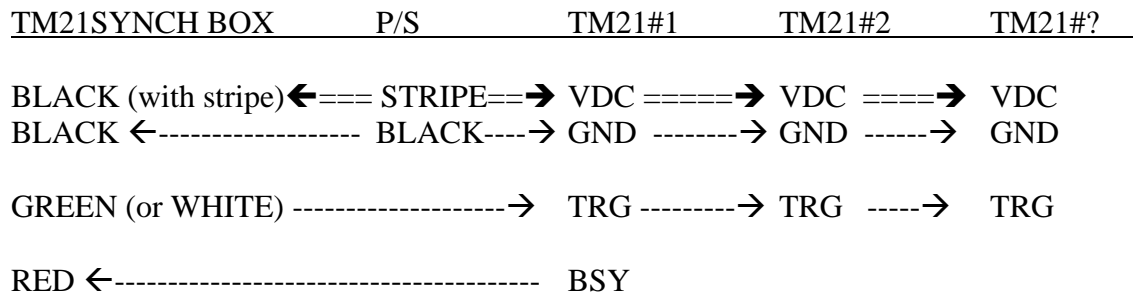

For more information contact:  
[support@technovision.com](mailto:support@technovision.com)  
[www.technovision.com](http://www.technovision.com)