

Technovision Inc.

TV-66K & KEY34 keypad

Quick Reference Guide


Technovision Inc.
1845 Sandstone Manor, #2
Pickering, Ontario
L1W 3X9
P:(905) 420-5153
F:(905) 420-0753
www.technovision.com

Operation

One of the options with the TV66K is the ability to access track on the DV-66 or DV-68 using the Technovision KEY34 "telephone style" keypad.

Installation Instructions:

- Change Dipswitch 2 on the TV66K to the OFF position (remaining switches ON).
- Change Dipswitch 3 on the TV66K to the OFF position if you want the * and # to be volume - and volume +.
-
- Make sure the power to the DV-66/68 player is OFF before attaching the TV-66K.
- Connect the TV66K control cable (RJ11-RJ11) to the KEYPAD port of the DV-66 or DV68.
- Connect the other end of the cable to connector P1 on the TV66K.
- Attach the optional K34 cable to the back of the KEY34 keypad so that the cable faces down.

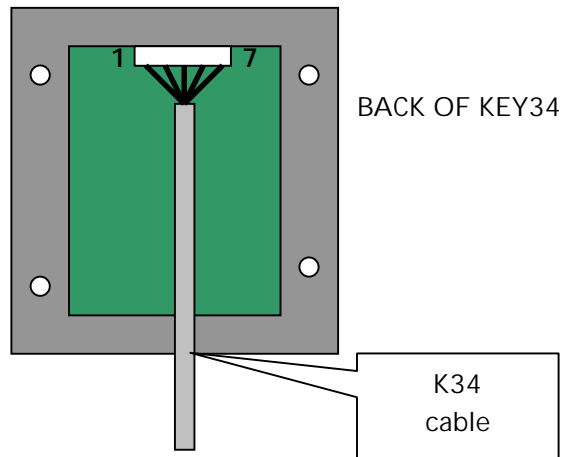

- If not already done, cut the DB9 connector from the end of the K34 cable and strip back the 7 wires.
- The stripped back wires from the K34 are then attached to the terminal connectors on the side of the TV66K in the following manner:

Colour	TV66K terminal	KEY34 Pin	Function
ORANGE	10	1	Scan2
RED	9	2	Scan1
BROWN	8	3	Scan0
BLACK	7	4	Return3
WHITE	6	5	Return2
BLUE	5	6	Return1
GREEN	4	7	Return0

- Power up the DV-66/68

Once powering up the DV-66/68, you can then enter the track number (1 to 99) on the KEY34 keypad.

For more information you may contact Technovision at:

P:(905) 420-5153
support@technovision.com