

Technovision Inc

TV-66KP

Quick Reference Guide

Version 1.1

Revision 07/04

Technovision Inc.
1845 Sandstone Manor, #2
Pickering, Ontario
L1W 3X9
P:(905) 420-5153
F:(905) 420-0753
www.technovision.com

Operation

The TV-66KP allows for button access to tracks on various digital players with the track pausing after the track search.

- Make sure the TV-66K is not installed against a conductive surface.
- Make sure the power to the player is OFF before attaching the TV-66K.
- Attach all optional buttons to the TV-66K (see instructions below)
- Attach the supplied cable to the player and connector TS1 on the TV-66K controller.

Dipswitch Settings

1 ON = DV66 STARTUP delay (default).

1 OFF = NO DV66 STARTUP delay.

2 ON = Same input is locked out (default)

2 OFF = Same input can be chosen again after 3 seconds.

Attaching Buttons

Up to nine buttons can be attached directly to the terminal connectors (#1...#9) on the TV-66K with terminal 10 being the common GROUND.

<u>Track#</u>	<u>Terminal connectors</u>
1	1 and 10
2	2 and 10
3	3 and 10
4	4 and 10
5	5 and 10
6	6 and 10
7	7 and 10
8	8 and 10
9	9 and 10