

Technovision Inc

TV-66KPN

Quick Reference Guide Version 1.1

Revision 07/10

Technovision Inc.
1845 Sandstone Manor, #2
Pickering, Ontario
L1W 3X9
P:(905) 420-5153
F:(905) 420-0753
www.technovision.com

Description

The TV-66KPN allows for button access to tracks on various digital players with the track pausing after the track search command. The DV66/68 must be in REPEAT mode for this program to function correctly.

- Make sure the TV-66K is not installed against a conductive surface.
- Make sure the power to the player is OFF before attaching the TV-66K.
- Attach all optional buttons to the TV-66K (see instructions below)
- Attach the supplied cable to the player and connector TS1 on the TV-66K controller.

Dipswitch Settings

1 ON = DV66 STARTUP delay (default).
1 OFF = NO DV66 STARTUP delay (test mode)

2 ON = Same input is locked out (default)
2 OFF = Same input can be chosen again after 3 seconds.

Attaching Buttons

Up to nine buttons can be attached directly to the terminal connectors (#1...#9) on the TV-66K with terminal 10 being the common GROUND.

Track#	Terminal connectors
1	1 and 10
2	2 and 10
3	3 and 10
4	4 and 10
5	5 and 10
6	6 and 10
7	7 and 10
8	8 and 10
NEXT	9 and 10

Program Operation

Upon start-up, the TV66K will send the TRACK 1 and the PAUSE command to the DV66/68 and will then wait for a contact closure between one of the input terminal connectors (1..9) and the GROUND (terminal 10).

Upon sending the track (or NEXT) command, the TV66K will send the PAUSE command to hold the image.