

Documentation for TecIR program

HD01L Version 1.1

Hardware Requirements


- TecIR Controller with HD01L firmware chip pre-programmed with a fixed cycle time (MM:SS) and 5Vdc power adapter.
- Optional IRR1, IRR2 or TOSIR (dual) infrared transmitter(s).
- Technovision HD01 with the Settings/Start To set to **MOVIE** (factory Setting).
- Single video file on a USB flash drive or SDHC card (FAT32 or NTFS formatted) inserted into the front of the HD01 player

Installation

- The HD01s and TecIR should be connected to the same switching power bar, so that they are turned on at the same time.
- The HD01s should be in line-of-sight of the infrared transmitters.
- HD01s should not be stacked on top of each other – there should be at least 1” of space between the players.
- **Make sure there are no other infrared emitters that may interfere with the signal being transmitted by the TecIR.**

Program Description

The system is designed to have the player(s) and controller turned on at the same time. Upon power-up the TecIR will wait 30 seconds and then issue the RESTART command to start playing the file. After the pre-programmed time (mm:ss), the controller will send the restart command to the player(s).

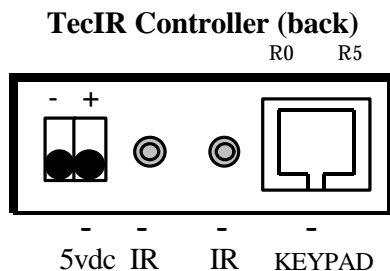

Test Modes:

Attaching R5 and R3 on the keypad port = No 30 second start-up delay.

Attaching R5 and R2 on the keypad port = Show duration set to 20 seconds.

Added to ver F/W 1.2:

Attaching R5 and R1 on the keypad port = No start-up delay and “pause” sent at the reset time.

For more information contact:

support@technovision.com

www.technovision.com